


sabichi

instructions



code 195114

1.7L White Kettle

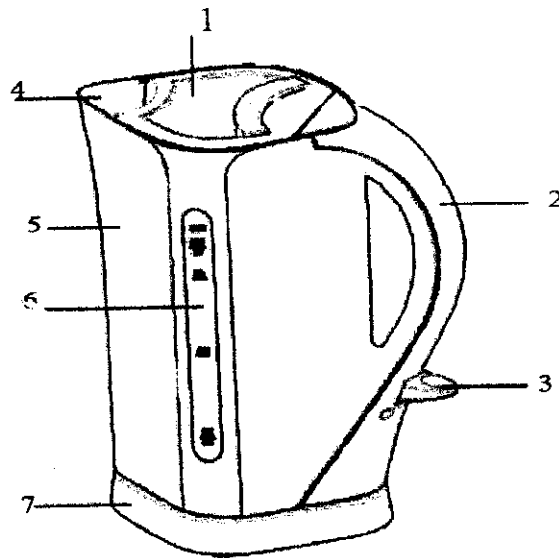

- | | |
|-----------------|----------------|
| 1. Lid | 2. Handle |
| 3. Power On/Off | 4. Spout |
| 5. Body | 6. Water Gauge |
| 7. Power Base | |

Important Safety Instructions

Before using electrical appliances basic safety precautions should always be observed including the following:

- Before first use, check the mains voltage corresponds to the voltage stated on the base of the kettle.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or if it is dropped or damaged. Take the appliance to a qualified service centre.
- To protect against the risk of electric shock, do not immerse the kettle in water or any other liquids.
- Do not let the cord hang over the edge of the table or contact a hot

surface.

- Regularly check the mains cord is still in a good and safe condition.
- To avoid a circuit overload, do not operate another high voltage appliance on the same circuit.
- Do not operate the appliance without water, to avoid damage to the heating elements.
- While the water is boiling, avoid contact with steam from spout until the kettle has stopped boiling.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast, as scalding may occur.
- Be careful when opening the kettle for refilling whilst hot.
- Close supervision is necessary when the item is used near children. The product is not intended to be used by children
- Do not touch the hot surface always use the handle.
- The kettle is for household use only and can only be used with the base provided.
- If the kettle is overfilled, boiling water may spill over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Operation Guide

Before first use it is recommended that you clean the kettle before use by boiling a full kettle of water twice then discarding the water. Max

capacity of kettle is 1.7L

1. To fill the water kettle, lift from the power base, open lid and fill with the desired level of water, not above MAX mark or below MIN mark.
2. Do not fill the water over the maximum level, as water may spill out of the spout when boiling.
3. Ensure lid is firmly closed before switching on the kettle.
4. Press the power on button and the indicator light will light up, kettle will start to boil, you can switch off the power by pressing the power button OFF position.
5. Ensure that the power on button is free of obstructions and the lid is firmly closed.
6. The kettle will not turn off if the power button is constrained or if the lid is open.
7. Lift the kettle from the power base and then pour water.
8. The kettle will not re-boil until the switch is pressed down again.
Kettle maybe stored on the base when not in use.

Boil Dry Protection

Should you accidentally let the kettle boil without water, the boil dry protection function will automatically switch off the power to the kettle off. If this occurs let the kettle cool down before re-boiling.

Care & Cleaning

- Clean the appliance after each use.
- Unplug the appliance from the outlet and allow it to cool down completely before cleaning.
- Wipe over the outside surface of the head with a damp cloth and polish it with a dry cloth.


- To prevent loss of gloss do not use chemical, steel, wood abrasives or cleaners to clean the outside.

Removal of Limescale

- Limescale in tap water may cause the kettle interior to discolor, to remove this buildup use a standard descaler.
- Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight, do not boil.
- Empty the solution from the kettle any stains remaining inside spout can be removed by rubbing a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water.
- Repeat and the kettle will be ready for use.

Waste Disposal

- According to waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated.
- If at any time in future you need to dispose of this product, please do NOT do so with household waste.
- Please send this product to WEEE collecting points where available.

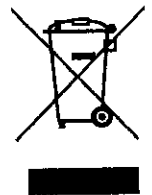

After Sales Service

This product is guaranteed for twelve months from the date of purchase. Proof of purchase will be required.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, unit parts, knobs or consumable items.

- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without prior notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not affect your statutory or legal rights.

Technical Details

230V~50Hz

Power 2200W

sabichi homewares Ltd

Sabichi House, 5 Wadsworth Rd, Perivale, Middlesex, U86 7JD, UK

Tel: +44 (0) 20 8799 7474, Fax: +44 (0) 20 8799 7475, Email: sales@sabichi.co.uk, Website: www.sabichi.co.uk