

GUARANTEE

Please retain your receipt with these instructions for future reference. If your iron is not working correctly, check that you have followed the instructions, that the fuse has not blown and that the main fuse/circuit breaker has not blown/tripped.

This product is guaranteed for 24 months from the date of original purchase. If any defect arises during this period, due to faulty materials or manufacture, the dealer who supplied it will replace it wherever possible.

This guarantee is subject to the following conditions:

- The guarantee is only effective within the United Kingdom
- The product must be used in accordance with these instructions.
- The product must only be used for domestic purposes.
- This guarantee is invalid if the product is re-sold or subject to unauthorised repair.
- No liability is accepted for incidental or consequential losses.
- No liability will be accepted in the case of accidental damage, negligent misuse, or power surges.
- This guarantee does not affect your statutory rights.

www.incuisine.com / enquiries@incuisine.com

THE IN-CUISINE RANGE

The In-Cuisine Range of Quality Appliances for your kitchen:

- *Small Appliances:*
Kettles, Iron, Toaster, Deep Fat Fryer.
- *Refrigeration:*
Refrigerators, Larder Fridges, Freezers, Fridge Freezers, Drinks Fridges.




Compliant to 89/336/EEC (EMC Equivalent) and 73/23 & 93/68/EEC (LV Directive)

In-Cuisine

USER GUIDE AND GUARANTEE

STEAM IRON: SISSW

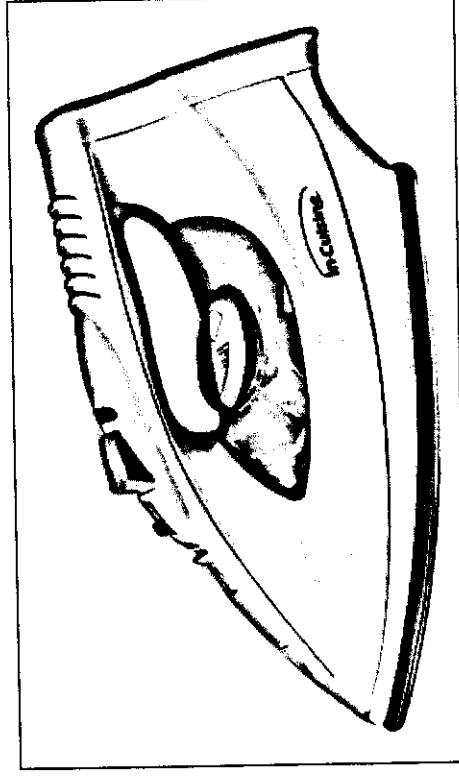

INSTRUCTIONS FOR USE

IMPORTANT SAFETY INSTRUCTIONS

Prior to use, please read these instructions carefully.

- Ensure your supply is rated at 220~240v and 50/60Hz before operating the appliance.
- Please ensure that this appliance is earthed or connected to an earthed supply. The iron is fitted with a three-core lead and a 13A BS1363 plug. To replace the fuse use a 13A ASTA or BS1362 fuse.
- The appliance must be placed on a stable flat surface with the power lead properly connected. Do not use in a bathroom or outdoors.
- Do not allow the iron or its lead to be submerged in water.
- The iron should never be left unattended while it is connected to the mains supply.
- Always unplug the iron before cleaning & maintenance.
- Never touch the metal sole plate area of the iron when in use; allow for cooling before handling
- Do not wrap the cable around the main body of the iron after use allow for cooling.
- This appliance must only be used with the power cord supplied. If this becomes damaged it must be replaced with a cord of the same type and standard.
- When cleaning, always disconnect from the mains and remove the power lead. Allow the iron to cool before cleaning or storage.
- The iron is not suitable for use by children or the infirm.
- Do not allow the power cord to hang over edges where it can be reached by children
- Never iron clothes on the body!
- This iron is for domestic use only

BEFORE USE

- Ensure your supply is rated at 220~240v and 50/60Hz before operating the appliance.
- Remove the iron from its packaging.
- The first time the iron is used a small amount of smoke may be emitted, this is perfectly normal and ceases to occur after the appliance has been in use for a while.

USE

- Fill the water tank on the steam iron ensuring that you do not fill past the maximum mark. Note: Iron must be unplugged from power supply when filling with water.
- Turn the temperature control dial to lowest position.
- Plug in the iron and the pilot light will come on indicating that the power is connected.
- Rotate the temperature control dial to the required setting for the clothes. The pilot light will come on indicating that the iron is heating. Start ironing when the pilot light goes out. It indicates that the iron has reached the suitable temperature for your selection.
- Steam Ironing: Press the steam button, a powerful spray off steam will shoot from the soleplate and penetrate deep into the fabric. This feature can be used when clothes are heavily creased.
- Spraying: Press the spray button towards the area to be ironed to produce a spray of water.
- After ironing unplug from the power supply, turn the dial to the lowest setting minimum, and allow iron to cool down.
- Always ensure that the water tank is empty after use.

STORAGE

- Always ensure that the iron is stored in an upright position on its heel. This will protect the sole plate from marking when not in use.

CLEANING

- Switch the iron off, disconnect from the power and allow it to cool down.
- Clean with soft damp cloth using detergent if necessary to remove minor stains.
- Do not immerse any part of the iron in water and ensure all connections switches and sockets are kept dry.
- Chemicals or abrasive cleaners must not be used as these can damage the surface of the iron.