



Model: STCAV8W

Operating Instructions - Manual Control Microwave

IMPORTANT SAFETY ADVICE

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

DO NOT use in a bathroom or outdoors.
DO NOT allow the microwave or its lead to be submerged in water.
DO NOT wrap the lead around the body of the microwave after use.
DO NOT operate the microwave on any metal surface.
DO NOT leave the microwave unattended whilst in use.
DO NOT allow children or the infirm to use the microwave.

ALWAYS ensure that the microwave is placed on a flat, stable surface with the power lead properly connected.
ALWAYS unplug the microwave before cleaning.

This appliance is not intended for use by persons including children with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

IMPORTANT - If the mains lead of this appliance becomes damaged then it must be replaced by the manufacturer's service agent or a suitably qualified person using the same rated cable in order to avoid a hazard.

THERE ARE NO USER SERVICEABLE PARTS INSIDE AND THE CASING SHOULD NOT BE OPENED BY AN UNQUALIFIED PERSON

THIS MICROWAVE IS FOR DOMESTIC USE ONLY

Electrical Connection

Ensure your supply is rated at 220~240V and 50Hz before operating the appliance. This microwave is fitted with a rewirable plug incorporating a 13amp fuse. In addition this appliance must be earthed or connected to an earthed supply. In the event of the fuse needing replacement then a 13amp fuse approved by ASTA to BS1362 MUST be used.


IMPORTANT: If the plug fitted is not suitable for your socket, then the 13amp plug supplied should be removed. Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code:

BLUE: Neutral
BROWN: Live
GREEN & YELLOW: Earth

As the colours in the mains lead may not correspond to the coloured markings in your plug, proceed as follows:

Connect the BROWN wire to the terminal marked 'L' or coloured RED, Connect the BLUE wire to the terminal marked 'N' or coloured BLACK, Connect the GREEN & YELLOW wire to the terminal marked 'E' or coloured GREEN or GREEN AND YELLOW. If in doubt consult a suitably qualified electrician.

Using Your Microwave

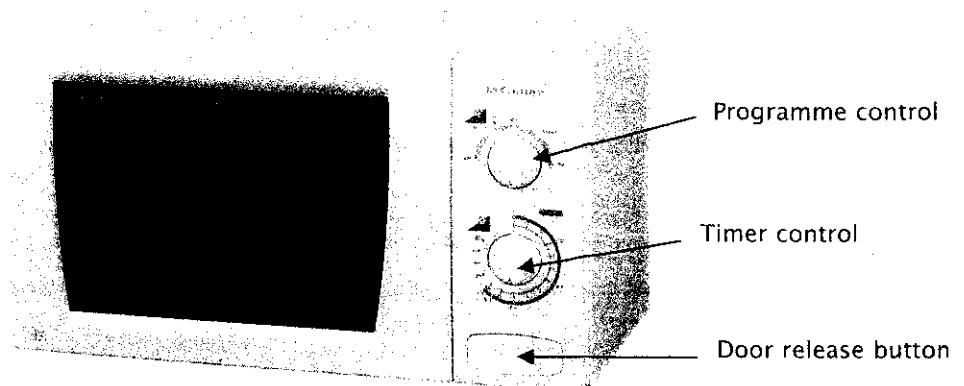

- 1) Place the microwave on a stable flat surface, away from water and other sources of heat. Make sure there is adequate ventilation for the microwave oven by leaving 10cm (4 inches) behind and 30cm (12 inches) above and beside the microwave oven.
- 2) Install the roller ring and turntable and ensure they turn freely.
- 3) Plug into a suitable power outlet, ensuring that the cable is neither near the heat source nor likely to get caught.
- 4) Press the door release button and place the food on the glass turntable or on a microwave safe plate or dish and close the door.
- 5) Set the desired power level using the power control
- 6) Set the timer. For times less than 2 minutes turn the timer to 3 minutes then back to the desired time
- 7) The microwave oven will start operating, the light will come on and the turntable will start rotating
- 8) Stop the microwave oven temporarily, by pressing the door release button. To stop microwave permanently set the timer to zero (0).

Defrosting

- 1) Set the power at defrost
- 2) Set the timer remembering defrosting takes longer than cooking.
- 3) Turn the food at least once. Remove food from the microwave oven once it is defrosted and allow to stand before cooking. Meat is defrosted once a fork or skewer can be pushed through the centre. It should then be allowed to stand until it is fully thawed.

Cleaning

- 1) Switch the microwave off, disconnect from the power and allow it to cool down.
- 2) Clean with a soft cloth, using it damp, if necessary, to remove minor stains.
- 3) Do not immerse any part of the microwave in water and ensure all connections, switches and sockets are kept dry.
- 4) Chemicals, detergents or any abrasive cleaning powder, pads or polish of any kind must not be used as they can damage the microwave.
- 5) Never use any pointed or sharp articles for cleaning the inside of the microwave.

Product Disposal



GUARANTEE

Please retain your receipt with these instructions for future reference. If your microwave is not working correctly, check that you have followed the instructions, that the fuse has not blown and that the main fuse or circuit breaker has not blown or tripped.

This product is guaranteed for 2 years from the date of original purchase. If any defect arises during this period, due to faulty materials or manufacture, the dealer who supplied it will replace it, on our behalf, wherever possible.

This guarantee is subject to the following conditions:

- The guarantee is only effective within the United Kingdom
- The product must be used in accordance with these instructions.
- The product must only be used for domestic purposes.
- This guarantee is invalid if the product is re-sold or subject to unauthorised repair.
- No liability is accepted for incidental or consequential losses.
- No liability will be accepted in the case of accidental damage, negligent misuse, or power surges.
- This guarantee is in addition to your statutory rights which are unaffected.

www.incuisine.com / enquiries@incuisine.com

Compliant to 89/336/EEC (EMC Equivalent) and 73/23 & 93/68/EEC (LV Directive)

©2008 In-Cuisine Ltd

P.O. Box 3893

Sheffield

S12 9AP