



Media Services / **video and audio production support /**

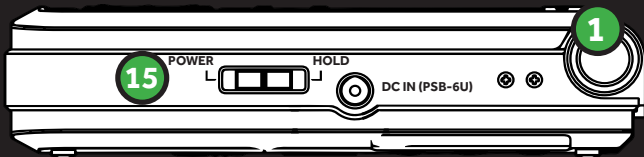

Roland R-05 Recorder
Quick Guide

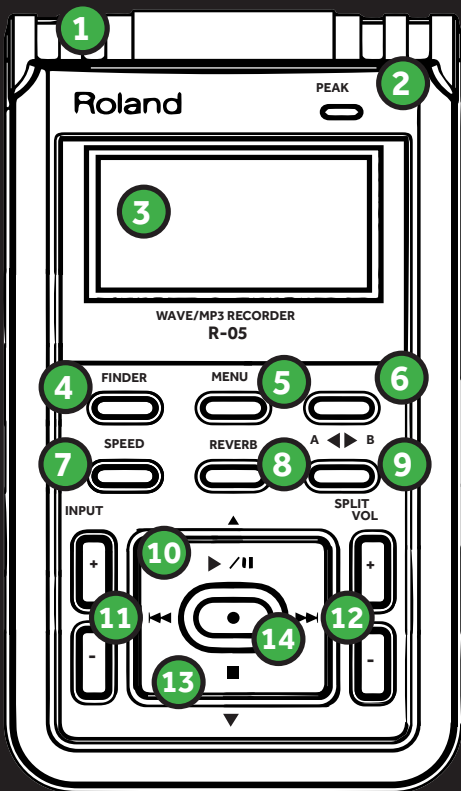

Roland R-05 Recorder

1. Internal Mic
 2. Peak Indicator
(Indicates when the input or output volume is excessive)
 3. Display
 4. [FINDER] button
 5. [MENU] button
 6. [REHEARSAL] button
 7. [SPEED] button
 8. [REVERB] button
 9. [SPLIT] button
 10. [▶/||] button
 11. [▶▶] button
 12. [◀◀] button
 13. [■] button
 14. REC indicator - This will light red during recording
 15. [●] button
 16. POWER button
-

Using the Recorder

Recording

- Slide the power switch towards **POWER** for several seconds. When the power turns on the main screen will display.
- Specify Rec Mode (file type)
- Press **MENU** twice to return to the main screen.
- Adjust the recording level – press [●] to enter stand-by mode and adjust the level of sound you're recording.
- Start recording – in Recording-standby mode (**REC** Indicator blinking) Press [●] or [▶/||]
- The REC Indicator will light and recording will begin.
- Press [■] to stop recording.
- To pause press [▶/||] and to resume recording press [▶/||] once again.

Specify Rec Mode (file type)

- Press **MENU** to access menu screen and use [▶/||] [■] to select Recorder Setup and Press [●]
- Use [▶▶] [◀◀] to change Sampling Rate setting.
- Use [▶/||] [■] to move the cursor to **Rec Mode** and use [●] to change the **Rec Mode** setting.
- Press **MENU** twice to return to the main screen.

Basic Playback Operation

- Access the main screen
- Use [◀◀] [▶▶] to select the file you want to play.
- Press [▶/||] to play file.
- Use **VOL** to adjust the volume.
- Press [■] to stop playback.

Time chart

An 8GB SD card will record:

File Format Time

WAV	220 minutes
MP3	3080 minutes

Battery life

Continuous Recording	aprox. 16 hours
Continuous Playback	aprox. 30 hours

www.manchester.ac.uk/mediaservices

0161 275 2523 / humanities bridgeford street building