





# Media Services / **video and audio production support /**



Canon Legria HFG25  
**Quick Guide**

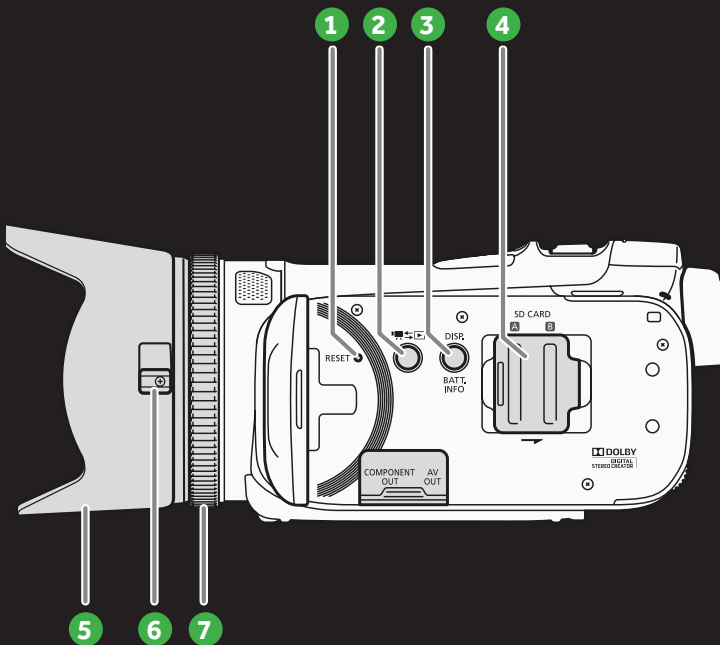

## Canon Legria HFG25 Camcorder

- |   |                                  |
|---|----------------------------------|
| 1. RESET button   | 4. Double memory card slot cover |
| 2.    (camera/play) button | 5. Lens hood                     |
| 3. DISP. (onscreen display) button. BATT. INFO (battery info) button.   | 6. Len Barrier switch            |
|   | 7. Focus ring                    |

## **Basic recording (Web)**

1. Set to **AUTO**
2. Press **POWER**
3. Open lens barrier – set to **OPEN**
4. Press to **START** to record

## **Higher Quality Recording (Broadcast)**

1. Set to **AUTO**
2. Press **POWER**
3. Open lens barrier – set to **OPEN**
4. Press to start to record

*(Default memory for recording is the built-in memory (32GB))*

## **Quality of Video**

The camcorder offers 5 Recording Modes at varying levels of video quality. Changing the Recording Mode will alter how much footage you can record onto your SD card (please refer to the table on the back page for more details).

As a rule, select MXP or FXP mode for shorter/ higher quality footage, or LP mode of longer/ lower quality footage.

To select different Recording Modes you will need to access the Menu from the display screen. By default, the camcorder is set to '**AUTO** mode' which is the same as (LP mode).

## Approximate recording times

♦ Default value

Recording mode →	MXP <sup>1</sup>	FXP <sup>1, ♦</sup>	XP+	SP	LP
Memory ↓					
4 GB Memory card	20 min.	30 min.	40 min.	1 hr. 10 min.	1 hr. 30 min.
8 GB Memory card	40 min.	1 hr.	1 hr. 25 min.	2 hr. 20 min.	3 hr.
16 GB Memory card	1 hr. 25 min.	2 hr. 5 min.	2 hr. 50 min.	4 hr. 45 min.	6 hr. 5 min.
32 GB Memory card/ Built-in memory <sup>2</sup>	2 hr. 55 min.	4 hr. 10 min.	5 hr. 45 min.	9 hr. 35 min.	12 hr. 15 min. <sup>3</sup>


<sup>1</sup> Recorded in 1920 x 1080 resolution. Movies recorded using other recording modes are recorded in 1440 x 1080 resolution.

<sup>2</sup> At the time of purchase, the built-in memory contains about 70 MB of music files (background music) and 5 MB of image files (image mix frames).

<sup>3</sup> A single scene can be recorded continuously for 12 hours; at that point, the camcorder will stop for about 3 seconds before resuming recording.

## Playback your recordings

The basic playback screen is in the Data Index screen.

1. Press  to set the camcorder to Playback Mode.
2. Change the Index Screen, if necessary.
3. Look for the scene you want to play back.

## Saving your recordings

It is recommended that you periodically back up your recordings onto a computer as we cannot be held responsible for any lost footage stored on the SD card.

[www.manchester.ac.uk/mediaservices](http://www.manchester.ac.uk/mediaservices)

0161 275 2523 / humanities bridgeford street building