

Media Services





Equipment Loans Quick Guide



ZOOM H1 Handy Recorder

Media Services

Humanities Bridgeford Street
mediaservices@manchester.ac.uk

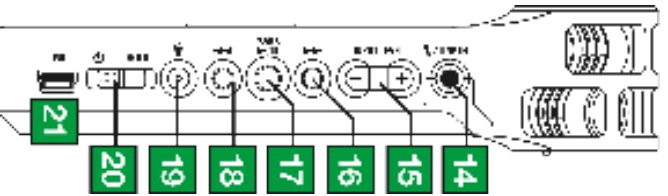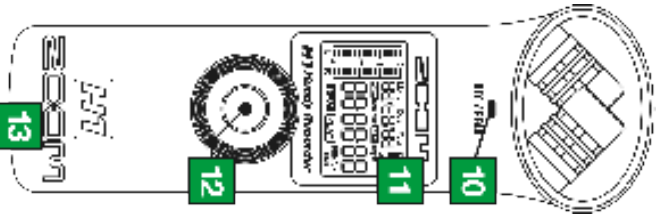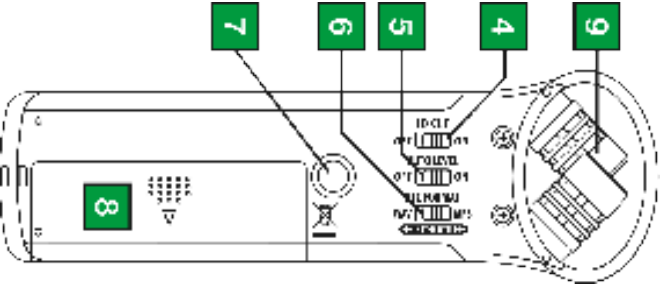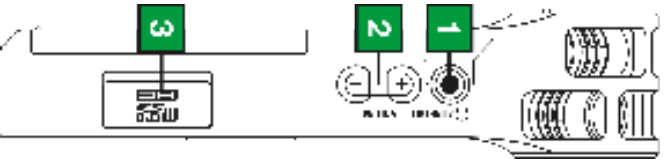

ZOOM H1 Handy Recorder

1. Line/headphones output jack
2. Volume adjustment buttons
3. microSD card slot
4. LO CUT switch
5. AUTO LEVEL switch
6. REC FORMAT switch
7. Tripod mount
8. Battery compartment cover
9. Stereo microphone
10. Recording/peak indicator
11. Liquid crystal display (LCD)
12. Record button
13. Built-in speaker (mono)
14. Mic/line input jack
15. Input level buttons
16. Fast forward button
17. Play button
18. Fast reverse button
19. Delete button
20. Power button
21. USB jack

Turning The Power On

To turn the unit **ON**, slide the power switch down for about 1 second.

To turn the unit **OFF**, slide the power switch down for about 1 second again.

Setting The Recording Format

- Select MP3 or WAV format.
- Use [⏪] and [⏩] to select the bit rate and press [⏺]

Recording

- Press [⏺] to start recording.
- Press [⏺] again to stop recording and return to the home screen.

Play

- Press [▶/⏸] to play the last recorded file. (The remaining playback time appears on the screen.)

Main button functions during playback

[⏪] / [⏩] Press during playback to select files

[▶/⏸] Press to pause/resume

[⏺] Press to return to the home screen

Delete

- Press [🗑] during playback of the file that you want to delete
- Press [⏺] to confirm.
- Press [▶/⏸], [⏪] / [⏩] or [🗑] to cancel deletion