

Temperature control

The temperature of this room is maintained at 20°C and can be adjusted by +/- 2°C.

The room temperature is displayed at the top of the controller.

If you want to lower the temperature in the room then press the left hand button which will lower the temperature set point in increments.

If you want to increase the temperature in the room then press the right hand button which will increase the temperature set point in increments.



Decrease Button



Increase Button

