



Extract Arm Control

To operate the extract arms safely the process ventilation switch needs to be activated.

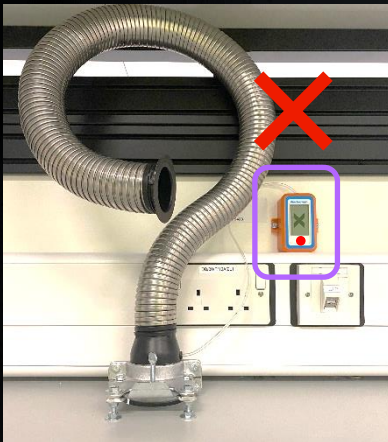

The air flow indicator will display a cross and the LED will flash until the damper is opened.

When not in use close the manual damper.

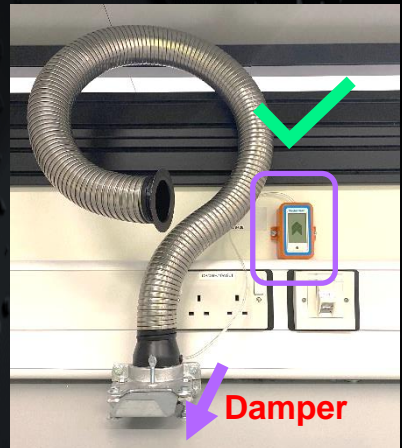

Once the air flow is at the correct velocity, the indicator will display an arrow and the LED will stop flashing.

Ensure the manual damper is open to maintain flow.