



Household Appliances

This appliance is not intended for use by persons including children with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure they do not play with this appliance.

IMPORTANT – If the mains lead of this appliance becomes damaged then it must be replaced by a suitably qualified person using the same rated cable in order to avoid a hazard.

THERE ARE NO USER SERVICEABLE PARTS INSIDE AND THE CASING SHOULD NOT BE OPENED BY AN UNQUALIFIED PERSON

THIS APPLIANCE IS INTENDED FOR DOMESTIC USE ONLY

Electrical Connection

Ensure your supply is rated at 220-240V and 50Hz before operating the appliance. This appliance is fitted with a rewirable plug incorporating a 13amp fuse. In addition this appliance must be earthed or connected to an earthed supply. In the event of the fuse needing replacement then a 13amp fuse approved by ASTA to BS1362 MUST be used.

IMPORTANT: If the plug fitted is not suitable for your socket, then the 13amp plug supplied should be removed. Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code:

BLUE	- Neutral
BROWN	- Live
GREEN & YELLOW	- Earth


As the colours in the mains lead may not correspond to the coloured markings in your plug, proceed as follows:

Connect the BROWN wire to the terminal marked 'L' or coloured RED, Connect the BLUE wire to the terminal marked 'N' or coloured BLACK, Connect the GREEN & YELLOW wire to the terminal marked 'E' or coloured GREEN or GREEN AND YELLOW. If in doubt consult a suitably qualified electrician.



Household Appliances

Using your microwave

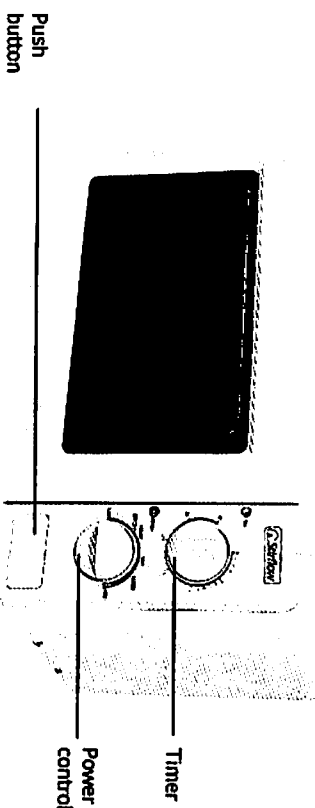

Before using the microwave for the first time wipe the inside of the microwave with warm water using a soft cloth. Wipe completely dry before use.

1. Place the microwave on a stable flat surface out of the reach of children, away from water and other sources of heat. Make sure there is adequate ventilation for the microwave by leaving 10cm behind, and 20cm above and around each side of the microwave.
2. Install the roller ring and turntable inside the microwave and ensure they move freely.
3. Plug into a suitable power outlet, ensuring that the cable is neither near the heat source nor likely to be accidentally caught.
4. Push open door button and place the food on the glass turntable or on a microwave safe plate or dish and close the door.
5. Set the desired power level using the power control.
6. Set the timer. For times less than 5 minutes turn the timer past 5 minutes then back to the desired time.
7. The microwave oven will start operating and the turntable will start rotating.
8. To stop the microwave oven temporarily pull open the door.
9. To stop permanently set the timer to zero "0".

Defrosting

1. Set the power at defrost.
2. Set the timer remembering defrosting takes longer than cooking.
3. Turn the food at least once. Remove food from the microwave oven once it is defrosted and allow to stand before cooking.

NOTE: Meat is defrosted once a fork or skewer can be pushed through the centre. It should then be allowed to stand until it is fully thawed.

Cleaning

1. Switch the microwave "OFF". Disconnect from power outlet and allow it to cool down.
2. Clean with a soft cloth.
3. Do not immerse any part of the microwave in water and ensure all connections, switches and sockets are kept dry.
4. Chemicals, detergents or any abrasive powder, pads or polish of any kind must not be used as they can damage the microwave.
5. Never use any pointed or sharp articles for cleaning inside and outside of the microwave oven.


Disposal Information



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Distributed by Steam Electric Company Ltd
Votec House, Hambridge Lane, Newbury, Berkshire, RG14 5TN

OPERATING INSTRUCTIONS

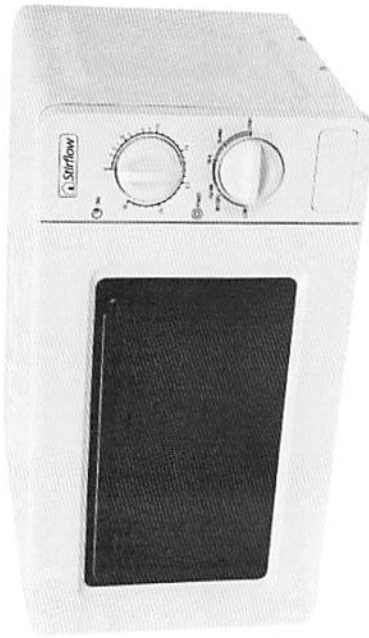

SMOM17LSC – 17 Litre White Microwave Stainless Cavity

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

DO NOT use in a bathroom or near any source of water.

DO NOT use your microwave outdoors.

DO NOT allow the microwave or its lead to be submerged in water.

DO NOT operate the microwave on any metal surface.

DO NOT leave the microwave unattended whilst in use.

DO NOT cover the ventilation slots on the case of the microwave.

DO NOT heat flammable objects such as paper, wood or clothing. Remove packaging from ready made meals in accordance with the instructions.

DO NOT place metallic objects in the microwave, eg metal containers, crockery with metallic finish or trimming, knives, forks, spoons or skewers.

DO NOT heat airtight objects, eg sealed containers, such as bottles, jars and plastic storage boxes, and food, such as eggs, nuts, and unpeeled fruit and vegetables.

ALWAYS ensure that the microwave is placed on a flat, stable surface with the power lead properly connected out of the reach of children.

ALWAYS follow cooking instructions when microwaving food.

ALWAYS unplug the microwave before cleaning.

TAKE CARE when heating liquids or baby foods. Allow at least 20 seconds settling time for temperature to equalise.