

Clipper:

User Guide
Guide de l'utilisateur
Bedienungsanleitung
Guía del usuario
Manuale d'istruzioni

Senator

Seat Height.

Hauteur d'assise.


Sitzhöhe.

Adjuste de altura del asiento.

Impostazione altezza del sedile.

Adjust the seat height using the lever under the seat on the right. The hips should be slightly higher than the knees with feet flat on the floor.

Adjustments are described from the seated position.

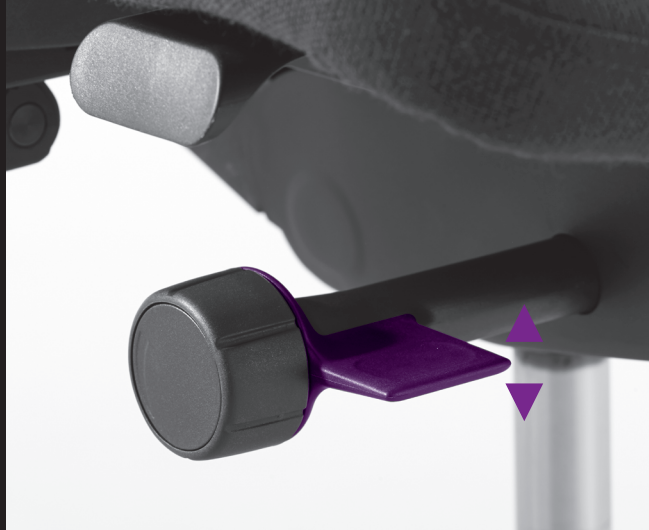

Seat Depth.

Profondeur de siège.

Sitztiefe.

Profundidad del asiento.

Profondità sedile.



When fitted, adjust depth of seat by pulling the lever out on the right hand side of the seat. With back in contact with the backrest allow at least three fingers distance the front of the seat to the back of the legs.

Adjustments are described from the seated position.



Travel Limiter.

Limiteur de déplacement.

Bewegungsbegrenzer.

Limitador de desplazamiento.


Limitatore di corsa.



On the left hand side of the chair a black rotational control is used to lock the recline feature of the chair in the upright position when it is rotated all the way forward.

Rotating the control backwards enables the free floating recline action - the extent of which is set to three ranges of movement 7°, 12° and 22°.

Adjustments are described from the seated position.

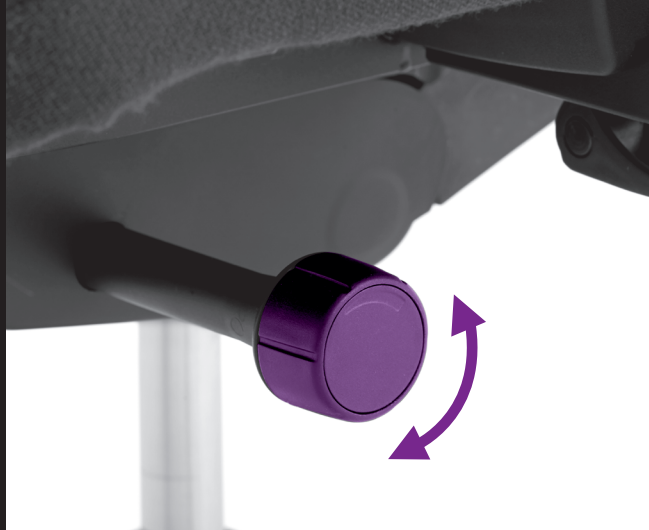

Tilt Tension.

Torsion arrière.

Rückenlehnen-Widerstand.

Ajuste de tensión del respaldo.

Impostazione della tensione schienale.

Pressure of the backrest can be varied to suit the user by using the rotational control on the right hand side of the chair next to the height adjustment lever.

The control can be rotated forward to increase the pressure or backwards to reduce the pressure.

Adjustments are described from the seated position.



Width Adjustable Arm.

Accoudoirs ajustables en largeur.

Breitenverstellbare Armlehnen.

Anchura del brazo.

Larghezza bracciolo.

When fitted, armrests may be adjusted in width by pulling down the lever under the base of the arm. The arm is then adjusted to the width required and the lever is pushed up to secure.

Adjustments are described from the seated position.



Multi-functional Armpad.

Accoudoirs multifonctionnelles.

Multifunktionale Armkisten.

Apoyabrazos multifuncional.

Imbottitura bracciolo multifunzione.

When fitted, the arm pad may be adjusted by rotating the pad inward in two steps and outward in two steps.

To enable the user to get closer to the desk with arms at the correct height the arm pad may also be moved forwards or backwards by sliding.

Adjustments are described from the seated position.



Lumbar Adjustment.

Torsion arrière.

Einstellbare Lumbalstütze.

Ajuste de tensión del resplado.

Impostazione della tensione schienale.

When fitted the height of the lumbar support can be adjusted to give your back additional support in the lumbar region.

Adjustments are described from the seated position.



Headrest Adjustment.

Réglage de l'appuie-tête.

Kopfstützenregulierung..

Ajuste del reposacabezas.

Regolazione poggiatesta.

When fitted the headrest is manually adjusted by lifting or lowering the whole headrest. The headrest panel is manually adjusted for pitch by turning the whole headrest.

The panel should ideally sit just at the back of your head against your neck.

Adjustments are described from the seated position.



Additional User Guidance.

Guide complémentaire de l'utilisateur.

Weitere Benutzerhinweise.

Directrices adicionales para el usuario.

Istruzioni aggiuntive.

Correct use

This office swivel chair is designed for a user weight of up to 150 kg and should only be used for the purpose intended while exercising due care and attention.

Using it inappropriately (eg. as a stepladder, sitting on the armrests) could result in accidents.

Castors

Different castors are available, for the sake of your safety and for use on different types of flooring in accordance with safety regulations: Hard castors for soft floors (standard). Soft castors for hard floors are optional. Changing castors: this might be necessary, for instance, after moving office, or after the installation of a new floor surface – simply pull out the castors and push new ones in.

Care & Maintenance.

Entretien général et maintenance.

Pflege und Wartung.

Cuidado y mantenimiento.

Cura e manutenzione.

Plastic parts

Mild soapy water is suitable for cleaning. Please do not use any aggressive cleaning materials or bleach-based cleaning agents.

Upholstery

In the case of light soiling to the upholstery, please only use suitable mild detergents. The upholstery should only be changed by skilled persons.

To maintain the character and durability of the upholstery, it should be vacuumed on a regular basis.

Leather

Leather is a natural product that will stretch and change colour over time, grain details and markings give the material its unmistakable character.

Rub off light soiling with a soft woollen cloth. Heavier soiling should only be treated with cleaners designed for the purpose. Avoid direct prolonged exposure to direct sunlight.

Servicing

Servicing work, such as exchanging or working on the gas-lifts, may only be carried out by trained Senator Group personnel.

Part of The **Senator** Group

Global Headquarters
Altham Business Park
Accrington
Lancashire
BB5 5YE
T +44 [0]1282 725000

thesenatorgroup.com

Issue-1.1
1368 | 10.17