


CHANGING THE CODE

The factory preset combination is 0-0-0-0. The combination can be reset with the handle in the fully unlocked green position.

Note: Do not set your combination to 0-0-0-0.

- 1 Turn the dials to the preset combination 0-0-0-0.
- 2 Slide the Reset Button to the reset position towards the arrow.
- 3 Set your new combination.
- 4 Slide the Reset Button back to original position. Make a note of your new combination prior to locking.
- 5 Your lock is now ready to use with your chosen combination.

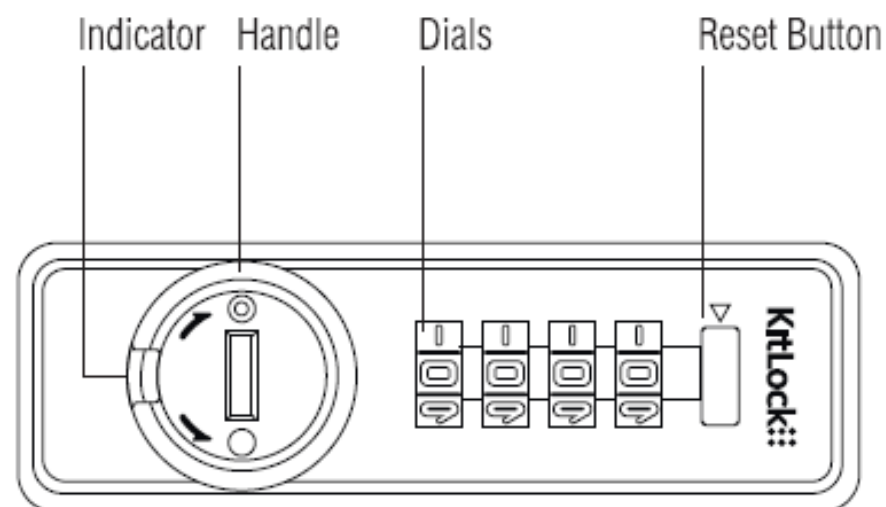

FINDING THE CODE

Note This function requires the Master Key (sold separately). This method should only be used to open the lock in an emergency, or when the User Code has been forgotten.

- 1 When the indicator is in the locked position, insert the Master Key and turn 90 degrees clockwise.
- 2 Holding the Master Key firmly in place, rotate each dial until it stops. You will feel a click as each code number is found.
- 3 Turn the Master Key 90 degrees counterclockwise when all four code numbers have been found. Make a note of the combination and ensure it unlocks the lock. You can now reset, or continue to use, the found combination.