

PIFCO®




INSTRUCTION MANUAL

Easy Steam Iron

Product number: 205698

Components

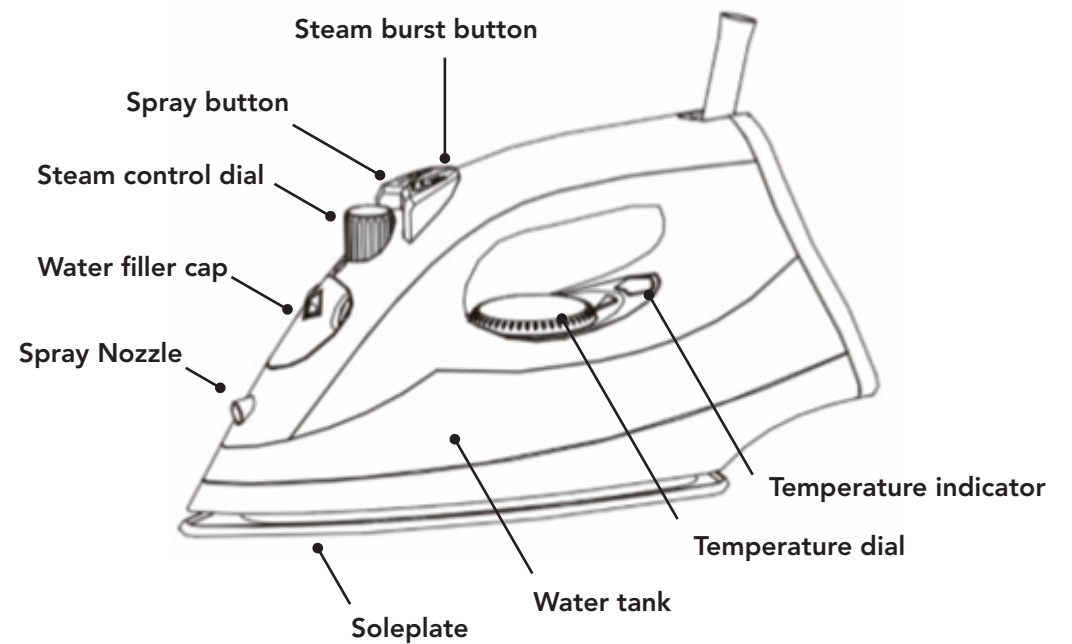

PIFCO®

How can we help?

The PIFCO team is always interested in what you have to say, so why not get in touch?



Call us

01909 544 570



Email us

info@pifco.com



Write to us

PIFCO Team, Sabichi Homewares Ltd,
Priorswell Road, Worksop, SB0 2BY



Website

www.pifco.com

WHAT'S IN THE BOX

- Easy Steam Iron
- Measuring cup
- Instruction manual

PIFCO®

Safety instructions

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- This product has been designed for indoor, domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Always plug your appliance:
 - into a mains circuit with voltage between 220V and 240V.
 - into an earthed electrical socket.

Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee.

- Completely unwind the power cord before plugging into an earthed socket.
- Use appliance for its intended use only.
- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The soleplate is very hot during the use of the appliance. Do not touch this surface before the appliance has completely cooled down.
- Never pull on the cord to disconnect the appliance from electrical outlet; instead, grasp plug and pull to remove the

plug from the socket.

- Do not allow cord to touch hot surfaces or come into contact with rough or sharp edges. Let the appliance cool completely down before putting away.
- Always disconnect appliance from the electrical supply when filling with water or emptying when cleaning, when not in use.
- Care should be taken when using the appliance due to the emission of steam.
- Do not operate appliance with a damaged cord or if appliance has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance. Take it to the nearest approved service centre for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electrical shock or injury to persons when the appliance is used.
- Close supervision is necessary for any appliance being used by or near children.
- This is an attended appliance. Never leave the iron unattended when in use.
- Always use and rest the iron on a stable, level, heat resistant surface.
- Burns can occur from touching the hot sole plate, hot water or steam.
- Before storing the appliance, once it is unplugged, please wait until it has cooled down.
- Burns could occur from touching hot metal or plastic parts, hot water or steam. Use care when you emptying the iron. There may be hot water in the reservoir.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.

- Do not directly iron or steam on people, animals or clothes while they are being worn.
- Some parts of the iron have been slightly greased and as a result the iron may smoke slightly when switched on for the first time. After a short time, the smoking will cease.
- Before using for the first time remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
- Do not put vinegar or other descaling agents into the water reservoir.
- Do not use chemically descaled water.
- The cord should not be allowed to touch the hot soleplate.
- The use of accessory attachments other than those provided by the manufacturer is not recommended and may result in fire, electric shock or personal injury.
- To protect the cord do not wind it tightly when stored and avoid the cord rubbing or touching the hot sole plate in use.

Save these instructions.

Before Use

Some parts of the iron have been slightly greased. When the iron is used for the first time you may notice a slight emission of smoke and hear some sound made by the expanding plastics. This is quite normal and it stops after a short period of time.

Remove any stickers, protective foil or storage cover from the sole plate.

Textile which has been applied (gloss, crinkle relief etc.) is best ironed at lower temperatures and on the reverse.

Sort the laundry to be ironed according to the international symbols on the garment label or if this is missing, according to the fabric type.

Filling with water

Never immerse the iron in water.

1. Make sure the appliance is unplugged.
2. Set the steam control to the "No Steam" position.
3. Tilt the iron backwards.
4. Open the water filler lid.
5. Fill the water tank with tap water. However, if the water in your area is very hard, it's advisable to use distilled water.

Do not fill the water tank beyond the MAX indication.

Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.

6. Close the water filler cap.
7. When you finish ironing, empty the water tank. Do not store the iron with water in the tank.

How to use your iron

Setting the Temperature

- 1 Place the iron on its heel.
- 2 Check the laundry care label for the required ironing temperature and then turn the temperature dial to align with the appropriate fabric type on the iron according to the following:
 - Synthetics
 - Silk, Wool
 - Cotton
 - MAX Linen

If you do not know what kind of fabric an article is made of, you will need to determine a suitable ironing temperature by ironing a part that will not be visible when worn.

If the fabric contains several kinds of fibers, always select the temperature most applicable. If a garment contains 60% polyester and 40% cotton, you must always choose the material requiring the lowest temperature i.e. Polyester

Silk, woolen and synthetic materials; iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains.

Start ironing garments that require the lowest ironing temperature, such as those made of synthetic fibers.

- 3 Plug the iron into an earthed wall socket, and the temperature light goes on.
- 4 When the temperature light goes out, wait a while before you start ironing.

The temperature light will go on and off during ironing, this is normal.

Steam ironing

- 1 Make sure that there is enough water in the water tank.
- 2 Select the recommended ironing temperature
- 3 Plug the iron into the mains
- 4 Steam ironing is only possible when the temperature setting is set to ••• or MAX. Otherwise, hot water may escape through the soleplate.
- 5 After the temperature light has gone out, set the steam control to the appropriate steam position. The iron will start steaming as soon as the set temperature has been reached.
- 6 Keep the material to be ironed very smooth and avoid running the iron over metal or foreign objects, such as; buttons, zips, etc.
- 7 When the ironing is finished or during breaks, place the iron in an upright position.
- 8 Disconnect the iron from the mains supply and pour out any remaining water and leave the iron to cool off.

Ironing without steam

- 1 Set the steam control to "No steam" position
- 2 Select the recommended ironing temperature

Spraying

You can use the spray function to remove stubborn creases at any temperature.

- 1 Make sure that there is enough water in the water tank.
- 2 Press the spray button several times to moisten the article to be ironed

Burst steam

This function provides extra steam to remove very stubborn creases.

1. Set the temperature dial to the MAX position and wait until the temperature light has gone out.
2. Press the Burst of steam button to produce extra steam. Wait a few seconds for the steam to penetrate the material before pressing again. For the best steam quality, do not use more than three successive bursts each time.
3. Excessive use of this feature will cause the iron to cool, wait at least 1 minute before using this function again to prevent water from dripping out of the soleplate. Always ensure that you consider the temperature setting for the type of fabric being ironed. To prevent water leaking from the soleplate, do not keep the steam control button depressed for more than 5 seconds.

Cleaning

- Before cleaning remove the mains plug from the wall socket and allow the iron to cool down sufficiently.
- Scale and other residue can be wiped off the soleplate with a damp cloth and some non-scratching proprietary cleaner.

Storage

- Before storing remove the mains plug from the wall socket and allow the iron to cool down sufficiently.
- Pour any remaining water out of the water reservoir, taking care to avoid splashing as the water may still hot.
- Set the steam lever to the no steam position.
- Stand the iron upright before storage.

PIFCO®

Technical details

Product Code: 205698

Voltage: 220-240V~ 50-60Hz

Power: 1600-2000W

Protection: Class I

Country of origin: China



Sabichi Homewares Ltd

5 Wadsworth Road, Perivale, Middlesex UB6 7JD

20 Harcourt Street, Dublin D02 H364



WASTE ELECTRICAL RECYCLING:

This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste.

The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- To recycle waste electrical products using the best available recovery and recycling techniques.
- To minimise the impact to on the environment
 - To treat any hazardous substances
 - To avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact you local authority.

PIFCO®

Warranty

This product is guaranteed for 1 year from the date of original purchase.
If the product fails within this period due to faulty materials or workmanship,
it will be repaired, replaced or refunded at our discretion.

Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed model numbers.

PIFCO disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting PIFCO please provide:

- Product model number / Product code.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570

Opening Hours: Monday - Friday, 9am - 5pm

Email: info@pifco.com

PIFCO[®]

www.pifco.com