

Operating Instructions

HOB

GB

English, 1

PI 604GB

Contents

GB

Installation, 2-3

Positioning
Electrical connections

Description of the appliance, 4

Overall view

Precautions and tips, 5

General safety
Disposal
Practical Advice on Using the Electric Hot Plates

Maintenance and care, 6

Switching the appliance off
Cleaning the appliance
Technical data

Assistance, 7

Installation

GB

! Before operating your new appliance please read this instruction booklet carefully. It contains important information for safe use, installation and care of the appliance.

! Please keep these operating instructions for future reference. Pass them on to possible new owners of the appliance.

Positioning


! Keep packaging material out of the reach of children. It can become a choking or suffocation hazard (*see Precautions and tips*).

! The appliance must be installed by a qualified person according to the instructions provided. Incorrect installation may damage property or cause harm to people or animals.


Built-in

The electric hobs are prepared with protection degree against excessive heating of Y type, it is therefore possible to instal them next to furniture which is higher than the working board. For a correct installation of the cooking top the following precautions must be followed:


- The hob may be located in a kitchen, a kitonen/ diner or bed sitting room, but no in a bathroom or shower room.
- The hoods must be installed according to the requirements in the hood handbook.
- The dimensions of the cutout for the appliance must be those indicated in the figure. Clamps are provided to fasten the cooktop to counters measuring from 20 to 40 mm in thickness. To fasten the cooktop securely, it is recommended that all the clamps be used.

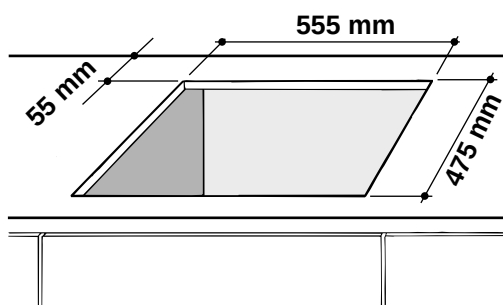

Fastening Clamps - Assembly Diagram

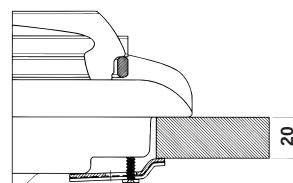


Clamp Position for
H=20mm top

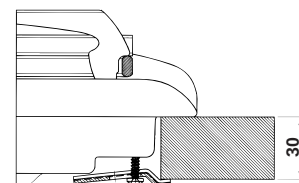


Clamp Position for
H=30mm top

Front

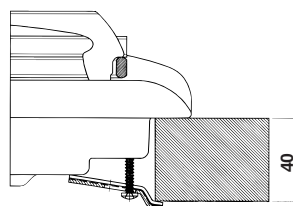

Clamp Position for
H=40mm top

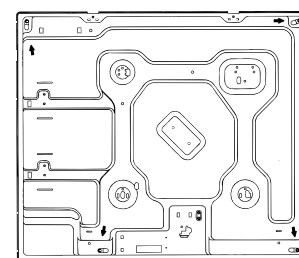



Back

! Use the clamps contained in the "accessory kit."


- In case a wooden panel should be fitted under the top for insulation, it will have be fitted at a minimum distance of 20 mm from the inferior part of the top.

Ventilation

When installing the cooktop above a built-in oven, the oven should be placed on two wooden strips; in the case of a joining cabinet surface, remember to leave a space of at least 45 x 560 mm at the back (*see picture*).

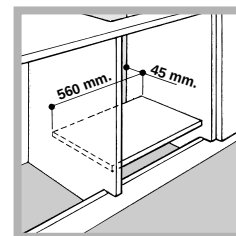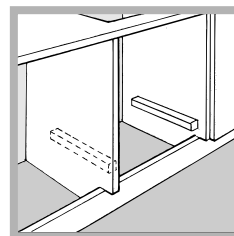

When installing on a built-in oven without forced ventilation, ensure that there are air inlets and outlets for ventilating the interior of the cabinet adequately (*see picture*).

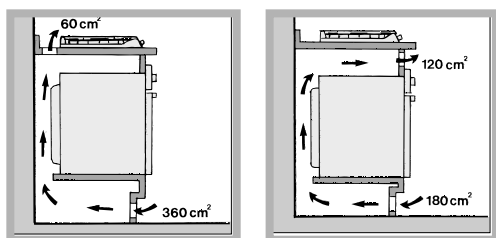

Electrical connection

The following installation procedure must be carried out by a qualified electrician.

! the cooker must be connected to the mains by a switched (double pole) cooker outlet correctly fused with a capacity appropriate to that shown on the hob Rating Plate. All electrical wiring from the consumer unit to the appliance, via the switched double pole cooker outlet, must be of an acceptable type and current rating as above. The supply cord, type H05 VV-F 3x2.5mm², must be positioned so that it never reaches at any point a temperature 50°C higher than the room temperature. The electrical installation must comply with the IEE Regulations, Building Regulation & local By-Lays.

! THIS APPLIANCE MUST BE EARTHED.

In the case of installation over a built-in electric oven the electrical hook-up of the stove top and that of the oven should be separate, for reasons of safety as well as for ease of eventual removal of the oven.

Supply cable installation

The electric hobs are supplied without cable. Use a cable:

H05 VV-F 3x2.5mm²

- Open the terminal box by removing the "V" screw and taking off the cover.


- The wires in the mains lead are coloured in accordance with the following code:

Green & Yellow - **Earth "E"** 



Blue - **Neutral "N"**

Brown - **Live "L"**

Connect the wires in accordance with the following diagram

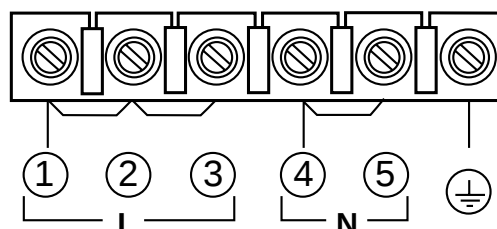


- Fix the cable in place with the "F" cable clamp, close the lid and fasten it with the "V" screw (see picture).

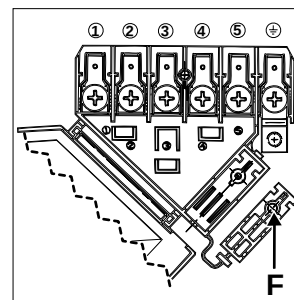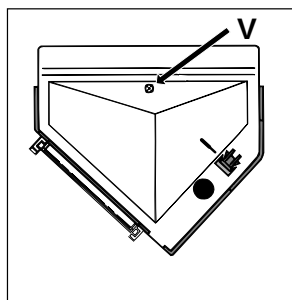

Description of the appliance

GB

Overall view

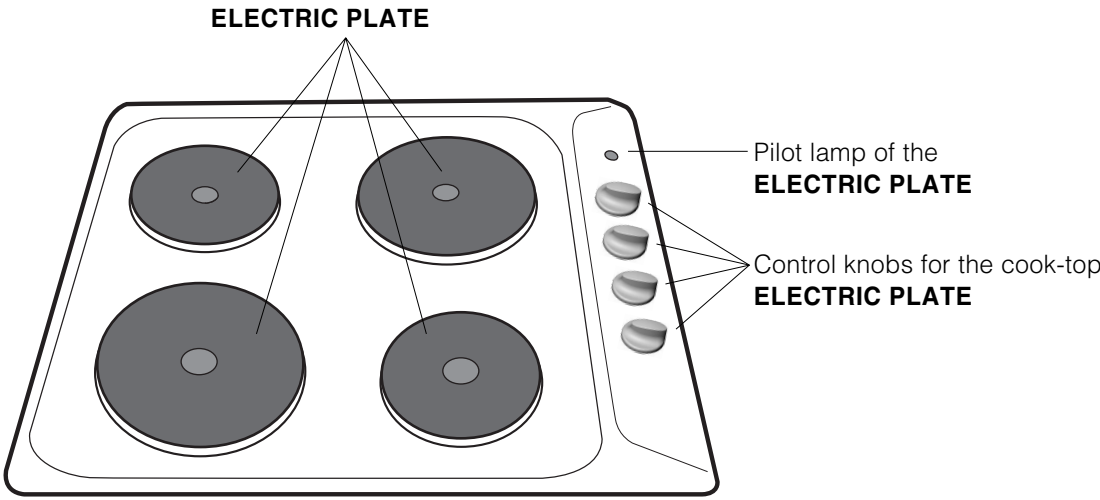

- The **ELECTRIC PLATE** vary in diameter and power: "normal" and "fast". The latter can be identified by a red boss in the center of the hot plate itself.
- The **ELECTRIC PLATE ON** indicator light switches on whenever the knob is moved from the 'off' position.
- The **ELECTRIC PLATE** control knob is a device used to regulate power. The knob may be turned clockwise or anti-clockwise and set to six different positions:

Setting	Normal or Fast Plate
0	Off
1	Low
2 - 5	Medium
6	High

! Please refer to the "Practical advice on using the appliance" section for a list of the relative positions and their recommended uses.

! This appliance has been designed and manufactured in compliance with international safety standards. The following warnings are provided for safety reasons and must be read carefully.

General safety

- **This manual is for a class 3 built-in cooktop.**
- **These instructions are only valid for the countries the symbols for which appear on the manual and the serial plate.**
- This appliance is designed for non-professional use in the home.
- This appliance was designed for domestic use inside the home and is not intended for commercial or industrial use.
- Do not touch the appliance with bare feet or with wet or damp hands and feet.
- The appliance must be used by adults only, to cook food according to the instructions in this manual. Do not use the hob as a worktop or chopping board.
- Ensure that power supply cables of other electrical appliances do not come into contact with the hot parts of the hob.
- The openings and slots used for ventilation and heat dispersion must never be covered.
- Make sure the knobs are in the “•”/”o” position when the appliance is not in use.
- When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable.
- Never carry out any cleaning or maintenance work without having unplugged the plug from the mains.
- In the case of a malfunction, under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or further malfunctioning of the appliance. Contact a Service Centre (*see Assistance*).
- Always make sure pan handles are turned towards the centre of the hob in order to avoid accidental burns.

- Do not leave the electric plate switched on without a pan placed on it.
- Do not use cookware with uneven or deformed bottoms.

Disposal

- When disposing of packaging material: observe local legislation so that the packaging may be reused.
- The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Practical Advice on Using the Electric Hot Plates

In order to avoid heat loss and damage to the hot plate, use cookware with a flat bottom the diameter of which is not less than that of the hot plate.

Setting	Normal or Fast Plate
0	Off
1	Cooking vegetables, fish
2	Cooking potatoes (using steam) soups, chickpeas, beans.
3	Continuing the cooking of large quantities of food, minestrone
4	For roasting (average)
5	For roasting (above average)
6	For browning and reaching a boil in a short time.

! Before using the hot plates for the first time, you should heat them at maximum temperature for approximately 4 minutes, without any pans. During this initial stage, their protective coating hardens and reaches its maximum resistance.

Maintenance and care

GB

Switching the appliance off

Disconnect your appliance from the electricity supply before carrying out any work on it.

Cleaning the appliance

! Do not use abrasive or corrosive detergents, stain removers, anti-rust products, powder detergents or sponges with abrasive surfaces: these may scratch the surface.

! Never use steam cleaners or pressure cleaners on the appliance.

- It is usually enough to wash the hob with a damp sponge and dry it with absorbent kitchen roll.
- The electric hobs should be cleaned using a damp cloth and then rubbed with oil while still warm.
- Stainless steel may become marked if it comes into contact with very hard water or harsh detergents (containing phosphorous) for long periods of time. After cleaning, it is advisable to rinse thoroughly and dry. It is also recommended that drops of water be dried.

Technical characteristic

DATA PLATE	
Electrical section	voltage: 230V ~ 50/60Hz Max power 7000 W
 	This appliance conforms to the following European Economic Community directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent amendments; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments; - 93/68/EEC of 22/07/93 and subsequent amendments. - 2002/96/EC

Communicating:

- appliance model (Mod.)
- serial number (S/N)

This information is found on the data plate located on the appliance and/or on the packaging.

GB

GB